

Engineering Note: EN0066 When to replace a Hydro-Mix Ceramic Retaining Ring

Summary: How to inspect a Hydro-Mix Ceramic Retaining Ring

Products affected: HM06, HM07, HM08


Revision Date: November 2014

Author: C.Grove

1 Summary

The Hydro-Mix sensor has been designed so that in cases of wear or damage, the Ceramic Disc can be easily replaced. The Ceramic Disc is held securely in place by the Ceramic Retaining Ring. This is protected in turn by a hardened Protection Ring. The Ceramic Retaining Ring will need to be removed if the Ceramic Disc requires replacing. This document describes how to check the integrity of the Ceramic Retaining Ring for determining whether it should be replaced.

NOTE: If the Ceramic Retaining Ring is damaged it must be replaced.

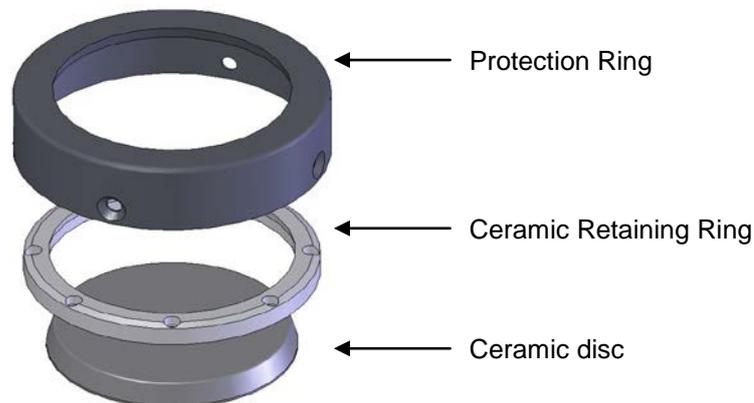

Ceramic Protection Components (HM07/HM08 shown)

The quality of the Ceramic Retaining Ring is vital to the stability and performance of the Hydro-Mix. Any damage or wear to this ring may result in water ingress and erratic sensor readings. It should therefore be regularly inspected for any signs of wear or damage.

In order to ensure continued protection of the Ceramic Retaining Ring, the Protection Ring must also be regularly checked and replaced when worn (details of when replacement is necessary are described in Engineering Note EN0057). If these instructions are NOT followed, the Protection Ring may wear through to the Ceramic Retaining Ring.



**HM06
Ceramic Retaining Ring**



**HM07/ HM08
Ceramic Retaining Ring**


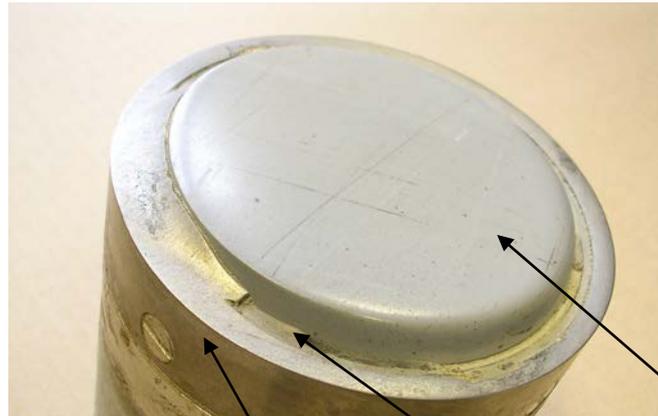


Figure 1: A very badly worn HM06 Protection Ring, Ceramic Retaining Ring and Ceramic Disc

The following checks must be conducted:-

1.1 External Wear

The Ceramic Retaining Ring must be replaced if there is any external wear or damage resulting from the Protection Ring having worn through. For HM07/HM08 the Ceramic Retaining Ring screws must also be replaced if they are damaged.

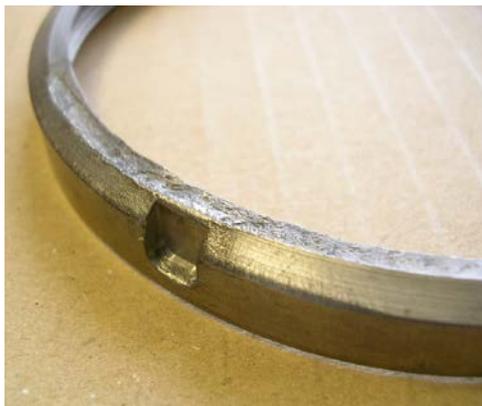

1.2 Circularity

The Ceramic Retaining Ring must be replaced if is out-of-round.

1.3 Flatness

The Ceramic Retaining Ring must be replaced if is not flat, is bent or twisted.

1.4 Internal Faces

The Ceramic Retaining Ring must be replaced if the internal faces are damaged.



1.5 HM06 Threads

The Ceramic Retaining Ring must be replaced if the internal threads are damaged.

1.6 HM06 Spanner Slots

The Ceramic Retaining Ring must be replaced if the spanner slots are damaged.

